

User Manual

DMWP1

Scaler Wall Plate HDBaseT Transmitter



All Rights Reserved

Version: DMWP1_2014V1.0

SAFETY PRECAUTIONS

To insure the best from the product, please read all instructions carefully before using the device. Save this manual for further reference.

- Unpack the equipment carefully and save the original box and packing material for possible future shipment
 - Follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
 - Do not dismantle the housing or modify the module. It may result in electrical shock or burn.
 - Using supplies or parts not meeting the products' specifications may cause damage, deterioration or malfunction.
 - Refer all servicing to qualified service personnel.
 - To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
 - Do not put any heavy items on the extension cable in case of extrusion.
 - Do not remove the housing of the device as opening or removing housing may expose you to dangerous voltage or other hazards.
 - Install the device in a place with fine ventilation to avoid damage caused by overheat.
 - Keep the module away from liquids.
 - Spillage into the housing may result in fire, electrical shock, or equipment damage. If an object or liquid falls or spills on to the housing, unplug the module immediately.
 - Do not twist or pull by force ends of the optical cable. It can cause malfunction.
 - Do not use liquid or aerosol cleaners to clean this unit. Always unplug the power to the device before cleaning.
 - Unplug the power cord when left unused for a long period of time.
 - Information on disposal for scrapped devices: do not burn or mix with general household waste, please treat them as normal electrical wastes.
-

Scaler Wall Plate HDBaseT Transmitter

NOTICE: Please read this user manual carefully before using this product. Pictures shown in this manual are for reference only. Different model and specifications are subject to real product.

This manual is for operation instruction only, not for any maintenance usage. The functions described in this version are updated till August 2014. Any changes of functions and parameters since then will be informed separately. Please refer to the dealers for the latest details.

This manual is copyright Eurosound. All rights reserved. No part of this publication may be copied or reproduced without the prior written consent of Eurosound.

All product function is valid till 2014-08-14.

Contents

1. Introduction	1
1.1 Introduction to DMWP1.....	1
1.2 Features	1
1.3 Package List.....	1
2. Panel Description.....	2
2.1 Front Panel.....	2
2.2 Side Panel.....	3
2.3 Rear Panel.....	4
3. System Connection.....	4
3.1 Usage Precautions	4
3.2 System Diagram	5
3.3 Connection Procedure.....	5
3.4 Energizing to 3 rd party.....	6
3.5 PoC Solution.....	6
3.6 Application	7
4. Control Modes	7
4.1 IR control	7
4.2 RS232 Control.....	7
4.2.1 Installation/uninstallation of RS232 Control Software	7
4.2.2 Basic Settings.....	7
4.2.3 RS232 Communication Commands	8
5. Specification	12
6. Panel Drawing	13
7. Troubleshooting & Maintenance	13
8. After-sales Service.....	15

1. Introduction

1.1 Introduction to DMWP1

DMWP1 is a Decora style transmitter that installs in a double-gang wall plate to provide a convenient interface for HDMI / VGA input sources. It has 1 HDMI IN, 1 VGA IN and 1 HDBT OUT with PoC. It supports VGA with full HD scaler, and HDMI 1.4 with 4k& 3D, input signals support auto-switching. The HDBaseT output supports 60m UHD video transmission with PoC, enables bi-directional IR and RS232 communication between DMWP1 and remote devices.

With its PoC solution, DMWP1 can be energized by far-end PoC receiver.

1.2 Features

- Selectable HDMI/ VGA with audio input
- Support VGA output resolution up to 1920x1200
- High bandwidth: 10.2Gbps
- In-built scaler function, support scaling HDMI/ VGA signals to match the native resolution of the display
- Transmit HDMI signals up to 4K
- Compliant with HDMI 1.4, support 1080p 3D
- HDCP compliance, equipped with HDCP auto-tracking solution
- Provides auto-switching capability
- Support multiple control methods including front panel buttons, IR, and RS232, support bi-directional IR & RS232 pass-through control.
- Supports firmware upgrading via USB.
- Energize WP8 with a DC 12V power output
- Powered by local power pack or PoC connection up to 60m
- Aluminum design for elegant and better cooling

1.3 Package List

- 1 x DMWP1
- 4 x Screws (for DMWP1)
- 3 x Pluggable Terminal Blocks (1 2-pin block, 1 3-pin block, and 1 4-pin block)
- 1 x Face Plate (Selectable)
- 4 x Screws (for the face plate)
- 1 x Power Adapter (DC 12V 2A, selectable)


Scaler Wall Plate HDBaseT Transmitter

➤ 1 x User Manual

Notes: Please confirm if the product and the accessories are all included, if not, please contact with the dealers.

2. Panel Description

2.1 Front Panel

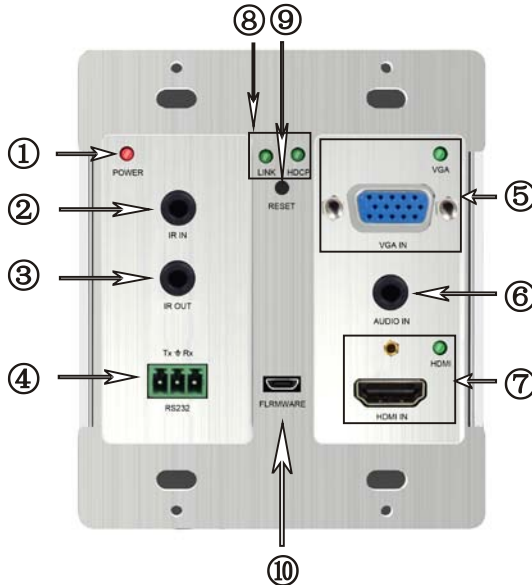


No.	Name	Description
①	Power indicator	Illuminates red when power on
②	IR IN	Connect with IR receiver, receive IR signals sent from the IR Emitter connected to the far-end receiver
③	IR OUT	Connect with IR Emitter; IR signals emitted from the IR emitter are received by the IR receiver connected to the far-end receiver.
④	RS232	Serial port, 3-pin pluggable terminal block, connects with the control terminal to control the DMWP1, supports bi-directional RS232 control (send control signal from local or receive control signal sent from far-end devices).
⑤	VGA IN	Connect with VGA source device. The indicator:

Scaler Wall Plate HDBaseT Transmitter

		<ul style="list-style-type: none"> ✓ illuminate yellow when there is VGA signal input ✓ illuminate green when the signal source is chosen as input source ✓ turn off when there is no VGA input signal
⑥	AUDIO IN	Connect with the audio output socket of VGA source device, deliver synchronous audio source with VGA signal source when choosing VGA as source signal.
⑦	HDMI IN	Connect with HDMI source device. The indicator: <ul style="list-style-type: none"> ✓ illuminate yellow when there is HDMI signal input ✓ illuminate green when the signal source is chosen as input source ✓ turn off when there is no HDMI input signal
⑧	LINK & HDCP	<ul style="list-style-type: none"> ✓ LINK: Twisted Pair Link status indicator, illuminate green when successfully connected. ✓ HDCP: HDCP compliance indicator, illuminate green when the source signals is with HDCP; turn off when not.
⑨	RESET	Press the button to reboot DMWP1.
⑩	FIRMWARE	USB port, used for firmware update Plug a flash disk or other storage device with update file (MERGE.bin), and send command 50698% to update firmware.

2.2 Side Panel

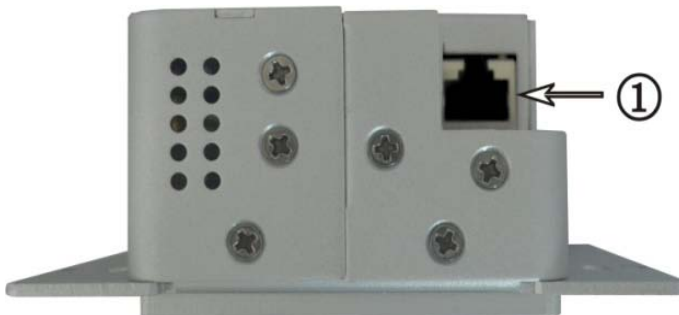

- ① HDBT OUT: RJ45 port, connect with receiver via a CAT5e/6 cable to deliver Audio/ Video signals, support PoC.

Note: DMWP1 support unidirectional PoC, i.e. it can be energized by far-end receiver but

Scaler Wall Plate HDBaseT Transmitter

it can't energize far-end receiver.

2.3 Rear Panel



No.	Name	Description
①	Power In	Power in port, 2-pin pluggable terminal block, connect with DC 12V power adapter
②	Power Out	Power out port, connect with 3 rd party to energize it with a 12V power output
③	RS232	Serial port, connects with a far-end receiver, supports bi-directional RS232 control (send control signal from local or receive control signal sent from far-end devices).


Note: Pictures shown in this manual are for reference only. Different model and specifications are subject to real product.

3. System Connection

3.1 Usage Precautions

- 1) System should be installed in a clean environment and has a prop temperature and humidity.
- 2) All of the power switches, plugs, sockets and power cords should be insulated and safe.
- 3) All devices should be connected before power on.

3.2 System Diagram

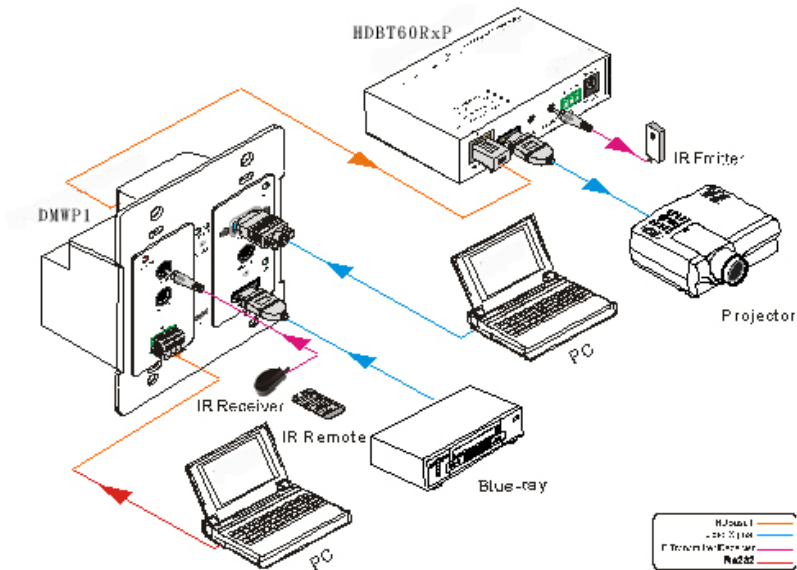

3.3 Connection Procedure

Step1. Connect HDMI source device (e.g. Blue-ray DVD) to HDMI input ports of DMWP1 with HDMI cable. Connect a VGA source device (e.g. PC) to the VGA input port of DMWP1 with VGA cable.

Step2. Connect HDBT60RxP to the HDBT port on the rear panel with twisted pair.

Step3. Connect a HDMI display to the HDMI OUT port of HDBT60RxP.

Step4. Connect a control terminal to the RS232 port on the front panel of HDBT60RxP.

Step5. Both DMWP1 and HDBT60RxP have IR IN and OUT. When one model is used for IR signal receiver, the IR signal must be sent out by the other model.

For example: When “IR IN” of DMWP1 connects with an IR receiver, the IR transmitter must connect to IR OUT of HDBT60RxP.

The IR signal can be transmitted bi-directionally between DMWP1 and HDBT60RxP.

Step6. Connect control device (e.g. PC) to RS232 port of DMWP1 or HDBT60RxP (bi-directional RS232 control, either is available).


Step7. Connect DC 24V power adaptor to the power port of HDBT60RxP, DMWP1 is able to get power from HDBT60RxP with PoC solution.

Scaler Wall Plate HDBaseT Transmitter

Note: DMWP1 supports unidirectional PoC, i.e, DMWP1 can get power from far-end PoC devices with PoC function while it can't energize far-end PoC devices when the power supply is connected to DMWP1.

3.4 Energizing 3rd party


DMWP1 has a 12V power output port on the rear panel. Connect the 12V power output port of DMWP1 to the power port of the 3rd party (refer to the following figure), DMWP1 is capable of energizing 3rd party.

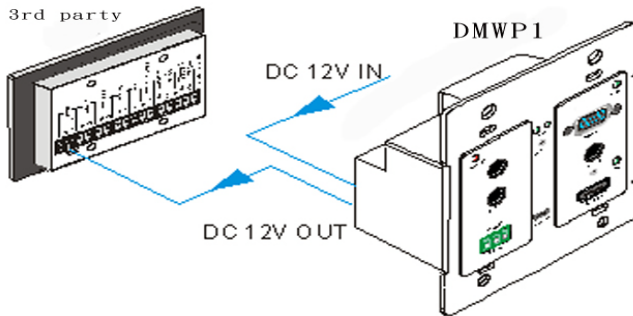

3.5 PoC Solution

DMWP1 supports PoC, which allows several terminals share the same power supply and eliminates the need for extra power supply at the remote nodes.

Connect a DC 24V power adapter to the power port of HDBT60RxP, DMWP1 can be energized synchronously with PoC solution, see the picture below:

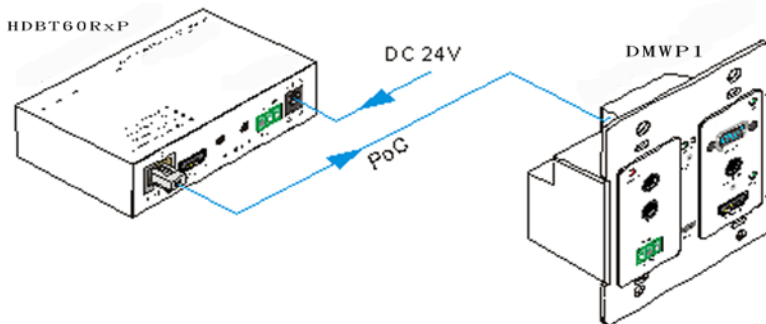

3.6 Application

DMWP1 has a good application in various occasions, such as computer realm, monitoring, conference room, big screen displaying, television education, command & control center and smart home etc.

4. Control Modes

4.1 IR control

DMWP1 provides an IR IN/ IR OUT socket for connection to IR receiver/ IR Transmitter to attain bi-directional IR transmission with the far-end receiver.

- Control far-end device from local

Control DMWP1 or far-end display device from local by the IR remote of far-end display. IR control signal will be received by IR IN socket, and converted to corresponding IR output socket of the far-end receiver.

- Control local device from remote

Control local source device from remote via corresponding IR remote. The control signal will be transmitted via the IR OUT socket.

4.2 RS232 Control

As RS232 can be transmitted bi-directionally between DMWP1 and HDBT60RxP, so it is able to control a third party RS232 device from local or control DMWP1 from remote.

When control a third party RS232 device, the baud rate of this device should be 2400, 4800, 9600, 19200, 38400, 57600 or 115200.

4.2.1 Installation/un-installation of RS232 Control Software

- **Installation:** Copy the control software file to the computer connected with DMWP1.
- **Un-installation:** Delete all the control software files in corresponding file path.

4.2.2 Basic Settings


First, connect DMWP1 with all input devices and output devices needed, then to connect it with a computer which is installed with RS232 control software. Double-click the software icon to run this software.

Here we take the software **CommWatch.exe** as example. The icon is showed as below:



Scaler Wall Plate HDBaseT Transmitter

The interface of the control software is showed as below:

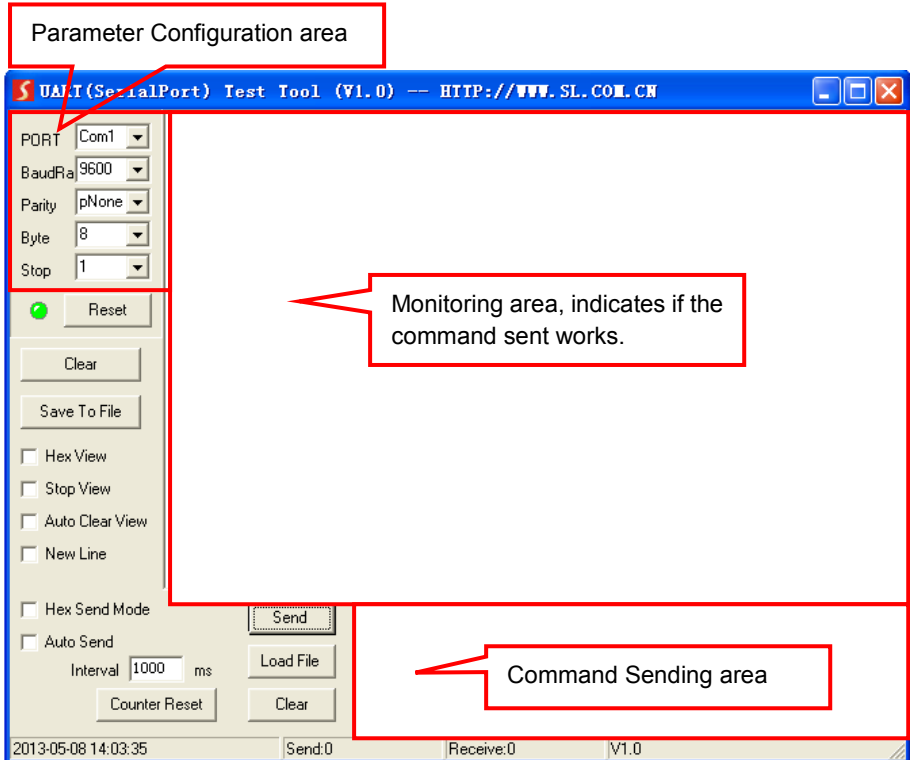

Please set the parameters of COM number, bound rate, data bit, stop bit and the parity bit correctly, and then you are able to send command in Command Sending Area.

4.2.3 RS232 Communication Commands

Communication protocol: RS232 Communication Protocol

Baud rate: 9600

Data bit: 8

Stop bit: 1

Parity bit: none

Command	Function	Feedback Example
Switch Commands		
50701%	Switch to HDMI input	Switch to HDMI
50704%	Switch to VGA input	Switch to VGA
50705%	Change the horizontal polarity to the opposite	Hpolarity:0/1

Scaler Wall Plate HDBaseT Transmitter

50706%	Change the vertical polarity to the opposite	Vpolarity:0/1
50707%	Check the present resolution and polarity	1920x1080 Hpolarity:1 Vpolarity:0
50770%	Enable auto-switching	Auto Switching
50771%	Disable auto-switching	Manual Switching
Resolution Commands		
50619%	Change the resolution to 1360X768 HD	Resolution: 1360x768
50626%	Change the resolution to 1024X768 XGA	Resolution: 1024x768
50627%	Change the resolution to 1280X720 720P	Resolution: 1280x720
50628%	Change the resolution to 1280X800 WXGA	Resolution: 1280x800
50629%	Change the resolution to 1920X1080 1080P	Resolution: 1920x1080
50620%	Change the resolution to 1920X1200 WUXGA	Resolution: 1920x1200
50621%	Change the resolution to 1600X1200 UXGA	Resolution: 1600x1200
Setup Commands		
502xx%	Set the brightness to xx. XX ranges from 00 to 99	Brightness: xx
503xx%	Set the contrast to xx. XX ranges from 00 to 99	Contrast: xx
504xx%	Set the saturation to xx. XX ranges from 00 to 99	Saturation: xx

Scaler Wall Plate HDBaseT Transmitter

505xx%	Set the sharpness to xx. XX ranges from 00 to 99	Sharpness: xx
50606%	Auto-adjust the input parameter	VGA Input Auto
50607%	Adjust the color temperature	Color Temperature: xx (xx can be medium, warm, user, or cool)
50608%	Set the aspect ratio	Aspect Ratio: xx (xx can be 16:9, 4:3, or auto.)
50614%	Set the picture mode	Picture Mode: xx (xx can be dynamic, standard, mild, or user.)
50699%	Check the system version	Version Vx.x.x
50779%	Switch to RS232 mode 1, enable scaler to control far-end devices	RS232 Mode 1: RS232 Control Scaler & Remote
50780%	Switch to RS232 mode 2, enable far-end devices to control scaler	RS232 Mode 2: RS232 & Remote Control Scaler
50790%	Set the HDCP status of HDMI input socket to Active	HDCP Active
50791%	Set the HDCP status of HDMI input socket to On	HDCP On
50792%	Set the HDCP status of HDMI input socket to Off	HDCP Off
50698%	Software update	
50617%	Reset to factory default	
Inquire Commands		
50632%	Check the output resolution	Resolution: xx
50633%	Check the picture mode	Picture Mode: xx
50793%	Check HDCP status	HDCP Off HDCP On

Scaler Wall Plate HDBaseT Transmitter

		HDCP Active
50635%	Check the image aspect ratio	Aspect Ratio: xx
50636%	Check the brightness	Brightness: xx
50637%	Check the contrast	Contrast: xx
50638%	Check the saturation	Saturation: xx
50639%	Check sharpness	Sharpness: xx
50640%	Check the color temperature	Color Temperature: xx
Adjustment Commands		
50678%	Enable screen output adjusting	Enter Output Position Adjust
50679%	Disable screen output adjusting	Exit Output Position Adjust
50670%	Move the image to left	Output Position Adjust X xx
50671%	Move the image to right	Output Position Adjust X xx
50672%	Move the image up	Output Position Adjust Y xx
50673%	Move the image down	Output Position Adjust Y xx
50674%	Stretch left from left side (increase image width)	Output Width Adjust xx
50675%	Pull right from left side (decrease image width)	Output Width Adjust xx
50676%	Stretch upwards from bottom side (decrease image height)	Output Height Adjust xx
50677%	Stretch downwards from bottom side (increase image height)	Output Height Adjust xx
EDID Commands		
50772%	EDID pass-through	EDID: bypass mode
50773%	Set EDID data to 1080P PCM 2.0ch	EDID:1080P&PCM 2ch
50774%	Set EDID data to 1080P Dolby 5.1	EDID:1080P&5.1ch
50775%	Set EDID data to 1080P3D Dolby 5.1	EDID:1080P3d&5.1ch

Scaler Wall Plate HDBaseT Transmitter

50776%	Set EDID data to 1080i PCM 2.0ch	EDID:1080i&PCM 2ch
50777%	Set EDID data to 4K*2K PCM 2.0ch	EDID:4K&PCM 2ch
50778%	Check EDID data	EDID:1080P&PCM 2ch EDID:1080P&5.1ch EDID:1080P3d&5.1ch EDID:4K&PCM 2ch
50799%	Program EDID file, send EDID data within 10s	Waiting for edid within 10 secs!

Note:

1. Commands with grey background are for VGA sources only.
2. EDID commands are for HDMI sources only.


5. Specification

Audio	
Input	
Input Signal	1 HDMI, 1 VGA, 1 AUDIO, 1 IR, 1 RS232
Connector	1 19-pin Type A HDMI female; 1 15-pin VGA; 1 3.5mm stereo jack; 1 3.5mm IR socket; 1 3-pin pluggable terminal block
Output	
Output Signal	1 HDBaseT, 1 IR
Connector	1 RJ45; 1 3.5mm IR socket
Transmission Mode	HDBaseT
Video	
Frequency Response	20Hz~20KHz
Impedance	> 10Ω
SNR	>85db@20Hz~20KHz
General	
Resolution	VGA: 800 x600, 1024 x 768, 1280 x 800,1280 x 1024, 1440 x 900,1600 x 1200, 1920 x 1080, 1920 x 1200; HDMI: 4Kx2K, 1080p 3D, 1080P(HD)/1080i/720P/576P/576i/480P/480i

Scaler Wall Plate HDBaseT Transmitter

Transmission Distance	1080P ≤ 60M (PoC) 4Kx2K ≤ 40M (PoC)
Bandwidth	10.2Gbps
HDMI Standard	Support HDMI1.4 and HDCP
Power Supply	DC 12V 2A; 9.6W
Temperature	-10 ~ +40°C
Humidity	10% ~ 90%
Chassis Dimension	Decora style two gang
Dimension (W*H*D)	104.5 x 89 x 44 mm
Weight	0.29Kg

6. Panel Drawing

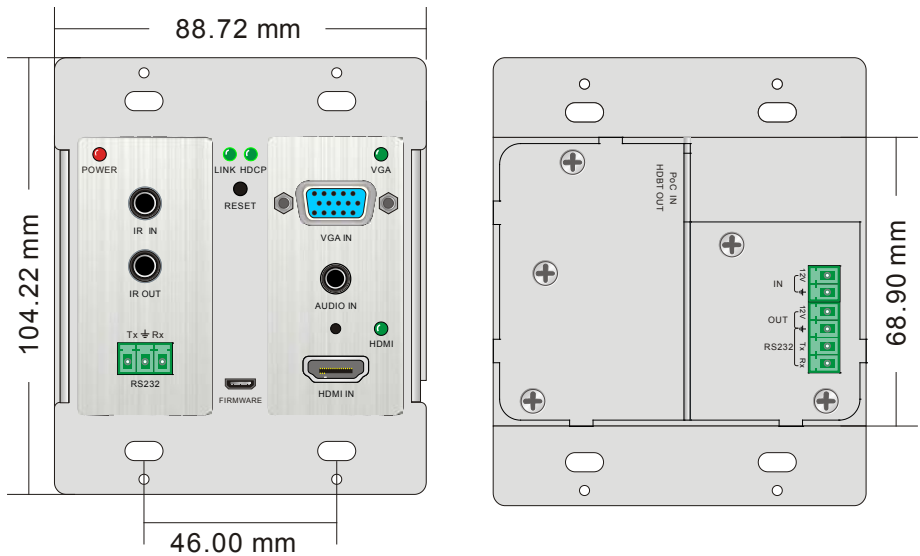

7. Troubleshooting & Maintenance

Problems	Causes	Solutions
Color losing or no video signal output in HDMI display	The connecting cables may not be connected correctly or it may be broken	Check whether the cables are connected correctly and in working condition.
No HDMI signal output in the device while local HDMI input is in normal working state		
Output image with snowflake		
POWER indicator doesn't work or no respond to any operation	Loose or failed power cord connection	Ensure the power cord connection is good
Cannot control the device by control device (e.g. a PC) through RS232 port	Wrong RS232 communication parameters	Make sure the RS232 communication parameters are correct.
Static becomes stronger when connecting the video connectors	bad grounding	Check the grounding and make sure it is connected well.
Cannot be controlled through RS232 port or front panel buttons	The unit may have already been broken	Send it to authorized dealer for repairing.

If your problem persists after following the above troubleshooting steps, seek further help from authorized dealer or our technical support.

8. After-sales Service

If there appear some problems when running DMWP1, please check and deal with the problems reference to this user manual. Any transport costs are borne by the users during the warranty.

1) Product Limited Warranty: Eurosound warrants that its products will be free from defects in materials and workmanship for **three years**, which starts from the first day you buy this product (The purchase invoice shall prevail).

Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the Warranty period must be presented to obtain warranty service.

2) What the warranty does not cover:

- Warranty expiration.
- Factory applied serial number has been altered or removed from the product.
- Damage, deterioration or malfunction caused by:
 - Normal wear and tear
 - Use of supplies or parts not meeting our specifications
 - No certificate or invoice as the proof of warranty.
 - The product model showed on the warranty card does not match with the model of the product for repairing or had been altered.
 - Damage caused by force majeure.
 - Servicing not authorized by Eurosound
 - Any other causes which does not relate to a product defect
- Delivery, installation or labor charges for installation or setup of the product

3) Technical Support: Email to our after-sales department or make a call, please inform us the following information about your cases.

- Product version and name.
- Detailed failure situations.
- The formation of the cases.

EURO[®]
SOUND